Installation Instructions for Model: ASF-4-PVC

Solar Exhaust Vent Cap for schedule 40 or 80 PVC Pipe

Step 1:

After you have removed the old head, slide the replacement head over the existing collar.



 
Step 2:

Observe the screws located on top of the vent. Use this as your pattern to attach the vent to the collar. [Tolerance: 1/2"]



Step 3:

With the PVC adaptor cap in place, use the provided #8 self-tapping screws [3 in total] to secure the base.









Active Ventilation Products Inc



800-Roof-Vent (766-3836) • 845-565-7770 roofvents.com • sales@roofvents.com