


# Aura-T & Aura-T Solar Ventilator for Trailers

## Installation Instructions

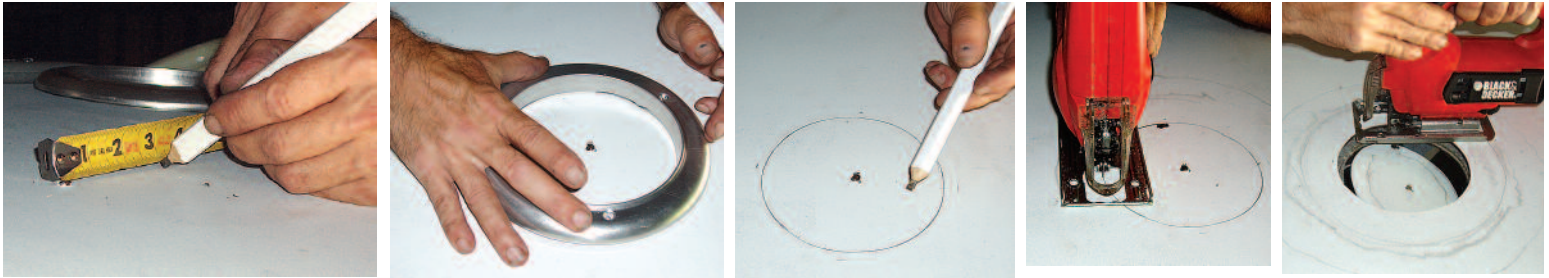

1. Choose the location on the roof where you want your Aura-T to be located. Make your pilot hole for the Aura-T is done from inside the trailer. Make sure the pilot hole is centered in the six inch hole you will make through your roof. The six inch hole should not run into any rafter, electrical wire or support beam for the roof.



2. Make sure that the six inch hole on your roof penetrates though the insulation and ceiling below.



3. On the roof, clean around the six inch hole by wiping away the dust and metal fragments. Now take your Aura-T and put roofing grade beetle tape (sealant) under the round flange, this is done so that the sealant fits around the hole. Make sure that the screw holes of the flange (round base) will have sealant underneath them.



4. Place the Aura-T over the hole, lining the opening of the vent, with the six inch hole on the roof. Fasten the flange (round base) to the roof with screws in each screw hole. Do not over tighten the screws to the flange (round base); for it may flatten the curvature of the flange.



5. Now that the Aura-T is installed, go inside the trailer and put the garnish onto the finishing ring. The garnish is the round, flat piece of aluminum. It fits around the upper part of the finishing ring. Once you put these two pieces together than insert the garish into the six inch hole in the ceiling, so that the finishing ring is on the ceiling covering the edge of the hole.



6. Now screw in the finishing ring onto the ceiling through the three pre drilled holes provided.

**You are now finished! Enjoy your product. Remember you can use this ventilator in all types of weather, even while driving.**

