


## **Roof Curb Flashing Detail**

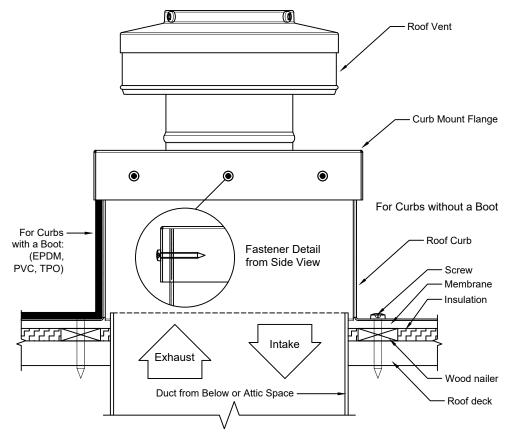

## **Roof Curb Installation Instructions**

- 1. Cut a square or round hole 13" in diameter in the roof deck.
- 2. Total number of screws needed for flange = 16
- 3. Recommended installation screw: **Flat, Bugle or Wafer Head** #10 x 1 1/2" Sheet Metal Screw, Type A Point
- 4. Flash roof curb onto deck according to specifications of the membrane manufacturer.
- 5. Screws not included.

## Insulated Roof Curb Model: RC-12-H12-Ins

Inside Opening: 13", Outside Length & Width: 15", Height: 12"

## Active Ventilation Products, Inc.

Website: roofvents.com Email: sales@

Email: sales@roofvents.com

