


Roof Curb Flashing Detail

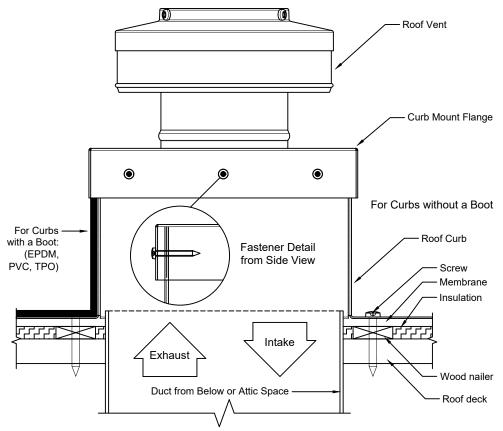

Roof Curb Installation Instructions

- Cut a square or round hole 13" in diameter in the roof deck.
- Total number of screws needed for flange = 16
- Recommended installation screw: Flat, Bugle or Wafer Head #10 x 1 1/2" Sheet Metal Screw, Type A Point
- Flash roof curb onto deck according to specifications of the membrane manufacturer.
- Screws not included.

Roof Curb Model: RC-12-H18

Inside Opening: 13", Outside Length & Width: 15", Height: 18"

Active Ventilation Products, Inc.

Website: roofvents.com Email: sales@roofvents.com

