# For Shingle Roof Installation

### Step 1:

Turn the vent upside down and make a cardboard template from the flange. The template should be the same size as the flange with the hole in the middle.



#### Step 3:

Remove cardboard template to show the square and circle pattern.



### Step 4:

Using a reciprocating saw cut out a hole in the roof deck and remove all debris.



### Step 2:

Using the template, trace the square and circle onto the roof as shown.



### Step 5:

Put roofing sealant on the underside along the bottom edge of flange as shown.





### Active Ventilation Products, Inc. 311 First Street, Newburgh, NY 12550-4857 800-ROOF VENT (766-3836) Pb: 845-565-7770 Eax: 845-562-896

800-ROOF VENT (766-3836) Ph: 845-565-7770 Fax: 845-562-8963 Website: roofvents.com Email: sales@roofvents.com

5777-4

# For Shingle Roof Installation


### Step 6:

Slide vent underneath the shingles stay within the square outline.



### 7B:

Required screw: #10 x 1.5" steel sheet metal screw Total number of screws required = 12

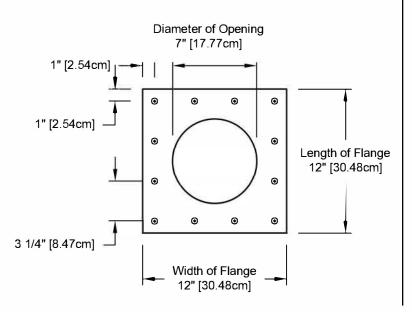

#### Step 7A:

With the vent in place secure the flange to the shingle roof using a screw gun or drill



### Step 8:

This is how the Round Back Vent should look when finished





## Active Ventilation Products, Inc. 311 First Street, Newburgh, NY 12550-4857 800-ROOF VENT (766-3836) Ph: 845-565-7770 Fax: 845-562-8963

Website: roofvents.com Email: sales@roofvents.com