Tail Pipe Installation with Roof Vent

Step 1:

Turn the vent upside down and make a cardboard template from the flange. The template should be the same size as the flange with the hole in the middle.



Step 3: Remove cardboard template to show the square and circle pattern.

Step 2:

Using the template, trace the square and circle onto the roof as shown.



Step 4:

Using a reciprocating saw cut out a hole in the roof deck and remove all debris.





5777-5



Active Ventilation Products, Inc.

 311 First Street, Newburgh, NY 12550-4857

 800-ROOF VENT (766-3836)
 Ph: 845-565-7770
 Fax: 845-562-8963

 Website: roofvents.com
 Email: sales@roofvents.com

Tail Pipe Installation with Roof Vent

Step 5:

Once the hole is cut reach in the attic and pull up the duct through the hole.



Step 7: Using a Zip Tie secure the Flex Duct to the Tail Pipe.

Step 6:

Insert the bottom of the Tail Pipe to the flex duct.



Step 8:

Put roofing sealant on the underside along the bottom edge of falnge as shown





5777-5



Active Ventilation Products, Inc.

 311 First Street, Newburgh, NY 12550-4857

 800-ROOF VENT (766-3836)
 Ph: 845-565-7770
 Fax: 845-562-8963

 Website: roofvents.com
 Email: sales@roofvents.com

Tail Pipe Installation with Roof Vent


Step 9:

Push Flex Duct back into attic, then lift shingles to insert flange underneath.



10A:

Required screw: #10 x 1.5" steel sheet metal screw Total number of screws required = 8

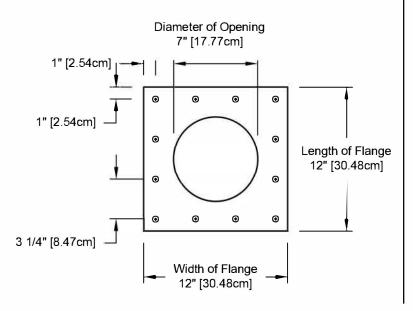

Step 10:

With the vent in place secure the flange to the shingle roof using a screw gun or drill



Step 11: This is how the Round Back Vent should look when finished.





Active Ventilation Products, Inc. 311 First Street, Newburgh, NY 12550-4857 800-ROOF VENT (766-3836) Ph: 845-565-7770 Fax: 845-562-8963

Website: roofvents.com Email: sales@roofvents.com

5777-5