Tail Pipe Installation with Roof Vent

Step 1:

Turn the vent upside down and make a cardboard template from the flange. The template should be the same size as the flange with the hole in the middle.



Step 2:

Using the template, trace the square and circle onto the roof as shown.



Step 3: Remove cardboard template to show the square and circle pattern.



Step 4:

Using a reciprocating saw cut out a hole in the roof deck and remove all debris.





Active Ventilation Products, Inc.

311 First Street, Newburgh, NY 12550-4857

800-ROOF VENT (766-3836) Ph: 845-565-7770 Fax: 845-562-8963

 5777-5

Tail Pipe Installation with Roof Vent

Step 5: Once the hole is cut reach in the attic and pull up the duct through the hole.



Step 6: Insert the bottom of the Tail Pipe to the flex duct.



Step 7:Using a Zip Tie secure the Flex Duct to the Tail Pipe.



Step 8:Put roofing sealant on the underside along the bottom edge of falnge as shown





Active Ventilation Products, Inc.

311 First Street, Newburgh, NY 12550-4857

800-ROOF VENT (766-3836) Ph: 845-565-7770 Fax: 845-562-8963

Tail Pipe Installation with Roof Vent

Step 9: Push Flex Duct back into attic, then lift shingles to insert flange underneath.




Step 10:

With the vent in place secure the flange to the shingle roof using a screw gun or drill



10A:

Required screw: $#10 \times 1.5$ " steel sheet metal screw Total number of screws required = 8

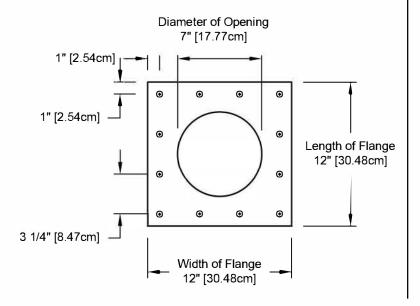

Step 11:

This is how the Round Back Vent should look when finished.





Active Ventilation Products, Inc.

311 First Street, Newburgh, NY 12550-4857

800-ROOF VENT (766-3836) Ph: 845-565-7770 Fax: 845-562-8963

 5777-5